

LED Remote Guide

Button **A** - Power ON / OFF

Button **B** - Color Selection (10 Colors)

Button **C** - Flash Function (3 Speeds)

Button **D** - Pulse Function (3 Speeds)

Feature **E** - Sliding Cover

Notes:

- To exit the Flash or Pulse mode, select Button **B**.
- Button **B** selection 11 and 12 are multi color modes.

